

Klick-it II Buried Wire Closure Installation instructions

Discard the small metal or plastic reducer used for smaller cables.


Strip the buried wire outer jacket and wire insulation to appropriate lengths.

Twist the bared wires together creating a "pigtail union".

Solder each connection with just enough solder to tin the twists.


Place insulator caps over the unions.

Use a cable tie to fasten the buried wires together just below the splices.

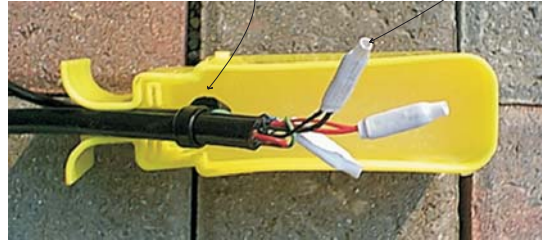

Place splice in the smaller half of the Klick-It II.

Push each insulator cap into the grease and away from each other.

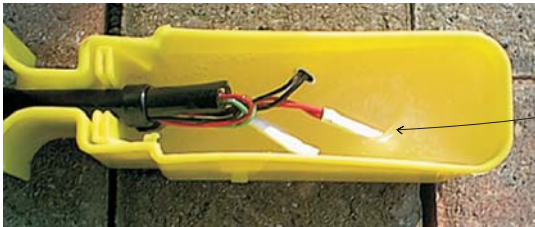

Install the second half of the Klick-It II, pressing the halves together until they snap shut

Double back the two burial wires over the Klick-It II and fasten with cable ties.

